

Manual to crimp Hoses

Step 1: cut the hose straight



Step 2 : separate the parts for assembly

- Hose barb according to the hose dimension
- Ferrule according to the hose dimension (check separated file)
- Cutted hose



Step 3 : assembly the parts with the hose


a) Push the ferrule over the hose



b) : push the hose barb in the hose until the hexagon



step 4 : crimp the hose assembly in the crimper tool together (the hook of the torque crimper should sit around 3 mm behind the beginning of the ferrule)

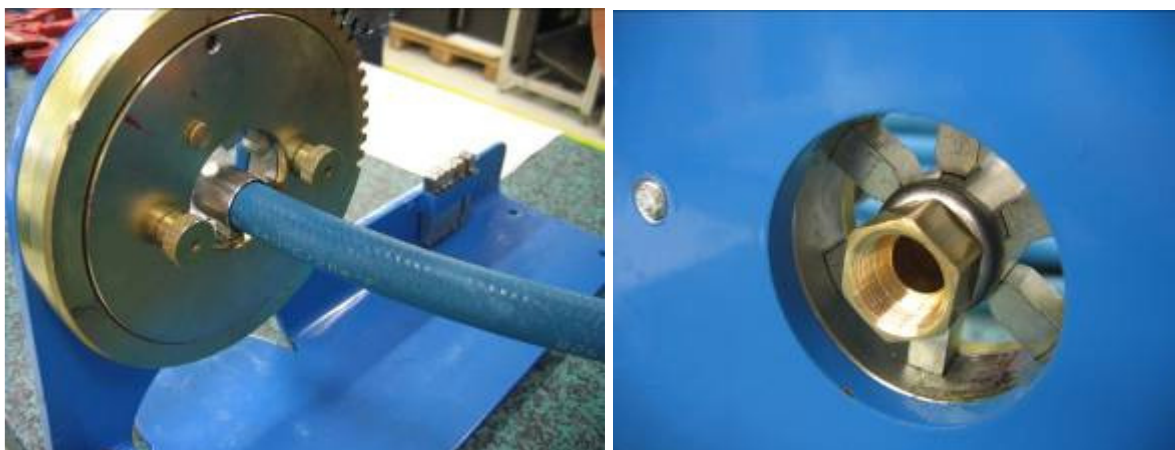

Article Number Crimping Tool: TFP-100 >> See catalogue

